


# Product description

## 1. Mobile APP Qr Code Download:



## 2. Product structure:

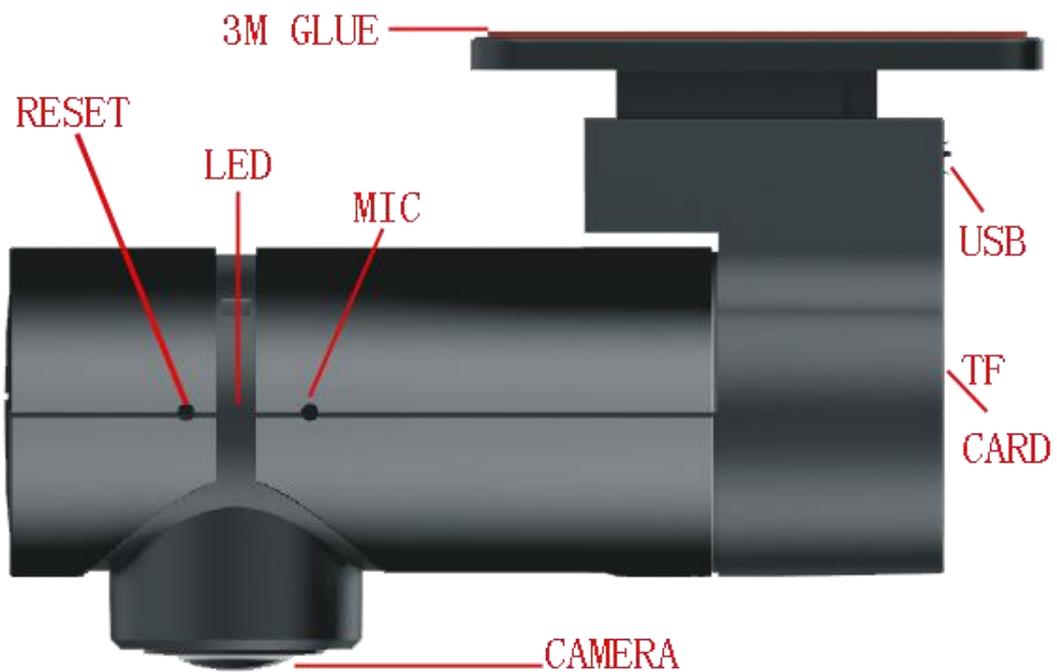

### 3. Operation Manual:

#### 1) Mobile Connection Recorder:

Turn on the Wifi settings on your phone -- Select "FH-T01" , enter the Default Password +88888888; turn on the APP on your phone and go to the start screen.

#### 2) The APP's home screen:

**Photo album:** Save the files downloaded from the recorder video and picture folder in the photo album;

**Recorder:** CLICK THE MIDDLE ICON to enter the recorder preview screen;

**Mine:** Instructions on the version number and protocol of the recorder.

#### 3) Recorder preview interface:

**Recorder Video:** The recorder recorded the file saved in this folder;

**Image:** The document in which the recorder took the picture is saved in this folder.

#### 4) Recorder settings:

**CHANGE PASSWORD:** set a new password (default 8 digits);

**VIDEO SOUND:** Turn Recorder video sound on and off (default is on);

**Date Tag:** Turns on and off the display of date and time (the default is on)

**Video Resolution:** Select video in either hd or hd (default HD);

**Looping Video:** off / 1 Min / 3 Min / 5 Min (Default 1 Min);

**Light Source Frequency:** 50 HZ / 60 Hz (default 50 Hz);

**Exposure bias:** -2 / -1 / 0 / 1 / 2 (Default 0);

**Image Quality:** Standard or high definition (default high definition);

**Preview Resolution:** Preview images in real time in either hd or HD (default HD);

**Recorder format:** Format Memory Card (maximum 128GB);

**Firmware version number:** the current software version number of the machine.

## 4. Problem Solving:

➤ Under normal operating conditions, if there is a problem with the product, please refer to the following methods to solve:

- **No photos, no cameras**

Check that the TF card is plugged in, formatted, in bad contact or damaged.

- **It stops when you record it**

Due to the large amount of HD video data, use a high-speed TF card compatible with SDHC. The high-speed TF card will have the C10 logo.

- **An error occurred while replaying images and videos**

An error occurred while reading the TF card document. You can use the mobile APP to delete the document or reformat the TF card.

- **The photo shoot was a blur**

Please check the Lens for dirt and Finger Marks and wipe the lens with Lens paper before Shooting.

- **Crash**

If the machine is down, please touch the reset key with a sharp object and restart the Machine.

- **NOTES**

This manual is for reference only. Please contact your local distributor if there is any change without notice.

## 5. Installation Diagram:

